

6

5

4

3

2

1

D

D

C


C

B


B

A


A

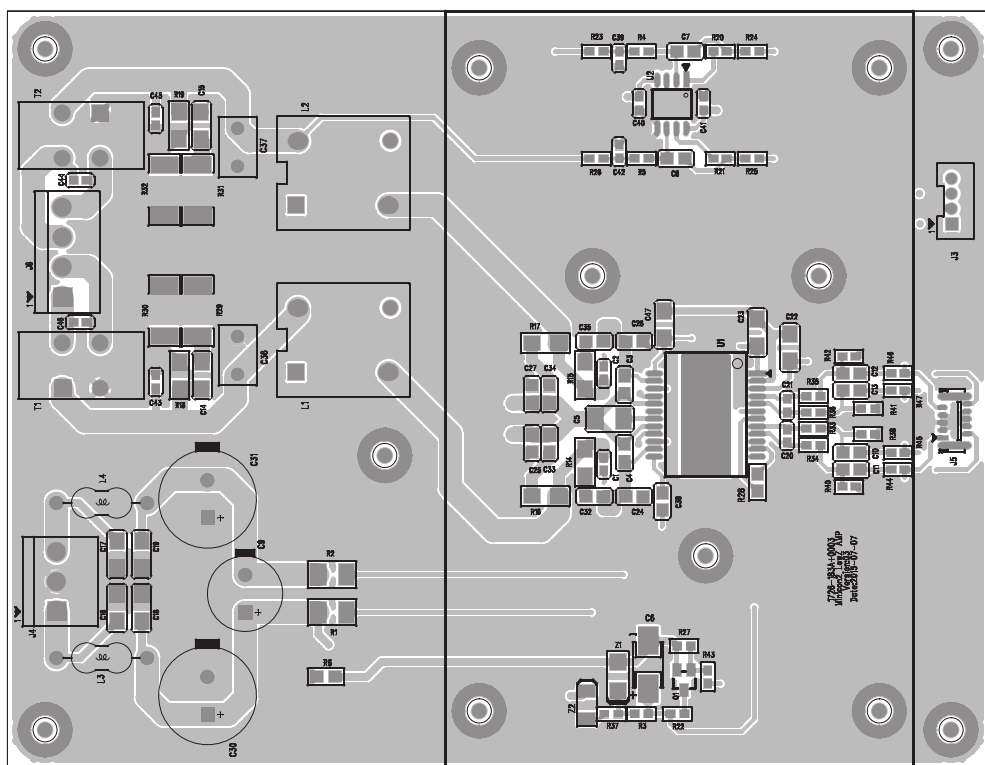


AMPLIFIER PCB TOP SILKSCREEN AND ETCH

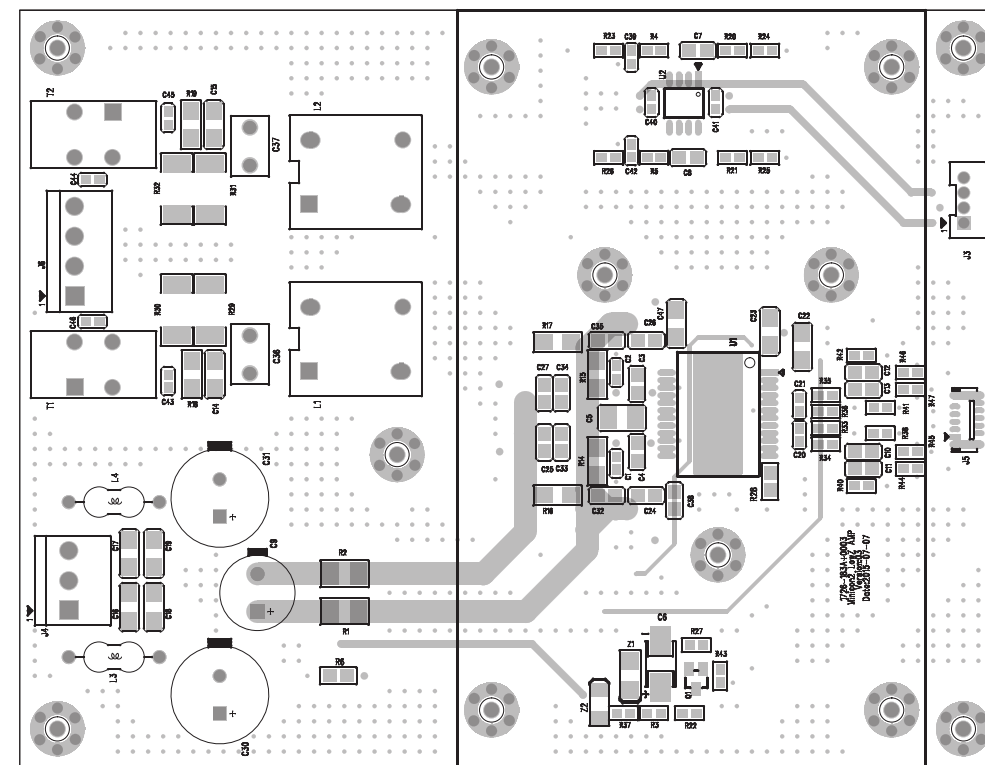

AMPLIFIER PCB TOP SILKSCREEN AND POWER ETCH

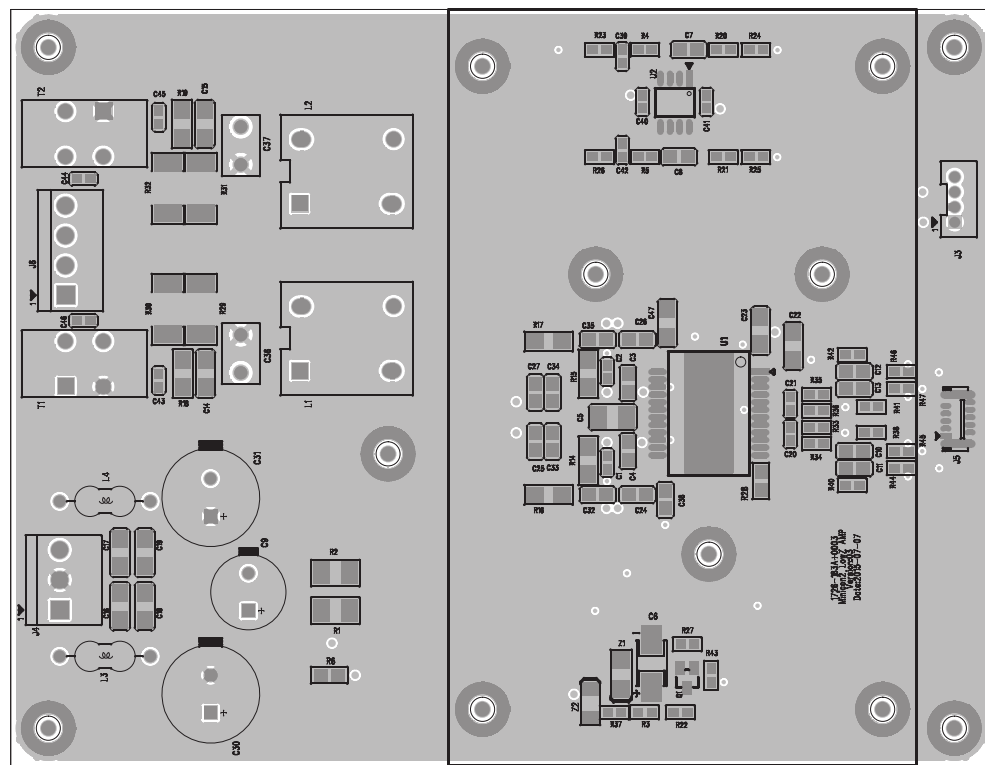

AMPLIFIER PCB TOP SILKSCREEN AND GROUND ETCH

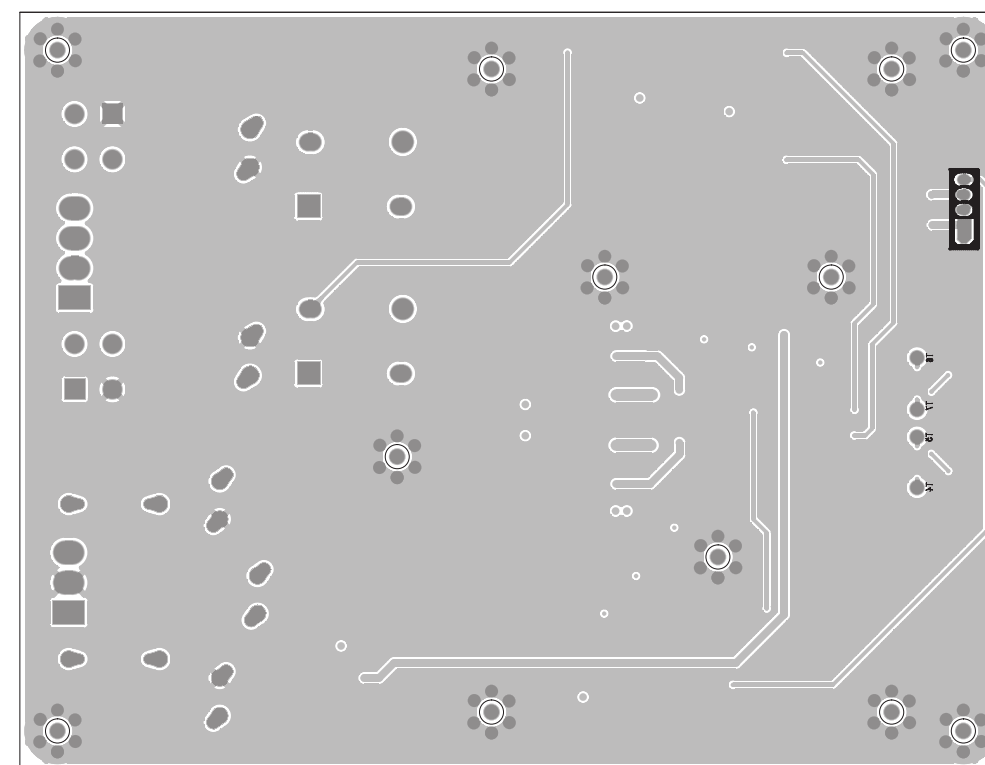

AMPLIFIER PCB BOTTOM SILKSCREEN AND ETCH



IZA/ZA 2120-LZ AMPLIFIERS
 AMPLIFIER PCB ASSEMBLY
 PCB P/N: 740163-001S
 BOARD LAYOUT DIAGRAMS
 SHEET 1 OF 1

6

5

4

3

2

1