

6


5

4


3

2


1

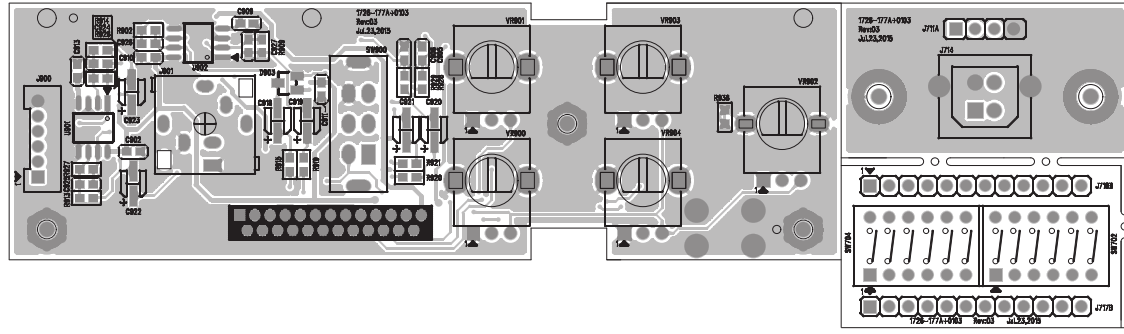


FRONT PANEL / USB / DIP SWITCH PCBs TOP ETCH AND SILKSCREEN

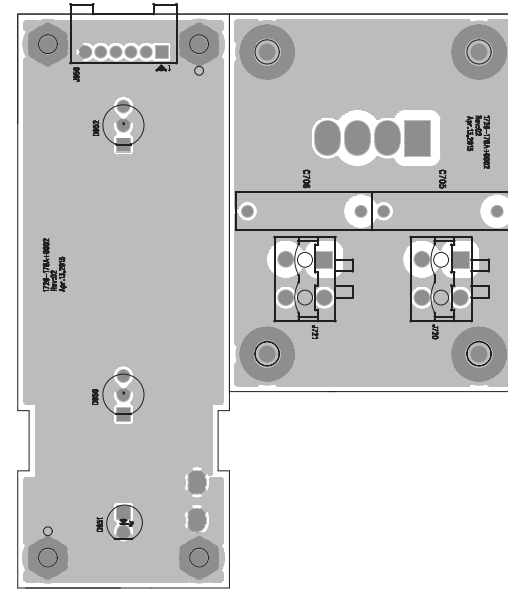

FRONT LED / SPEAKER PCBs TOP ETCH AND SILKSCREEN

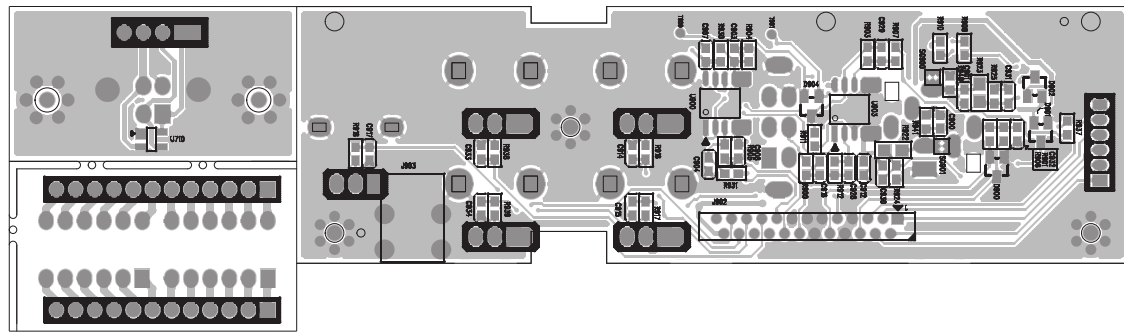

FRONT PANEL / USB / DIP SWITCH PCBs BOTTOM ETCH AND SILKSCREEN

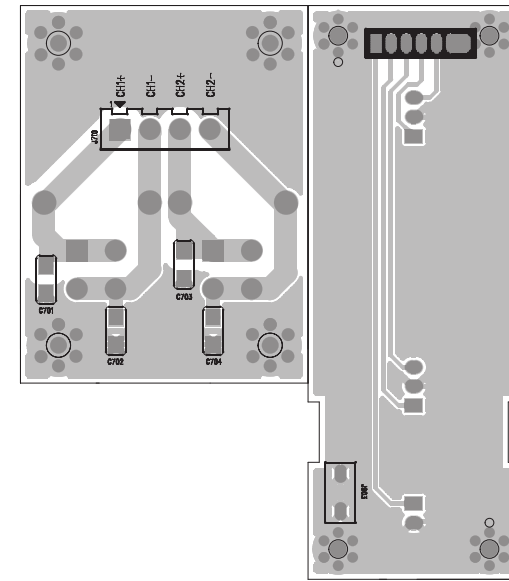

FRONT LED / SPEAKER PCBs BOTTOM ETCH AND SILKSCREEN

BOSE

IZA 2120-HZ, IZA 2120-LZ AMPLIFIERS
FRONT PANEL, USB, DIP SWITCH
FRONT LED AND SPEAKER PCBs
BOARD LAYOUT DIAGRAMS
SHEET 1 OF 1

6

5

4

3

2

1