

# HI-Pot Testing

L1 Compact System



# Always Follow all Safety Guidelines When Performing Any HI-POT Testing!!!!!!!!



If There Are Any Questions Concerning Hi-Pot Testing, Hi-Pot Settings, or Procedures Please Refer to the Corporate HI-POT Procedure OP119939




Always Verify That The Hi-Pot Tester Has Been Checked For Proper Operation AND The Daily Log Has Been Signed Off Before Starting Test.



- 1. Hi-Pot Tester
- 2. Hi-Pot Break-Out Box
  - Has harness for Hi-Voltage and return lines to connect to the Hi-Pot tester (keyed connectors)
  - Has feed-thru connector for return line to connect to UUT
- 3. AC Cord
  - To connect between break-out box and UUT
- 4. Return Cable (return and continuity cable are the same)
- 5. Continuity Cable (return and continuity cable are the same)



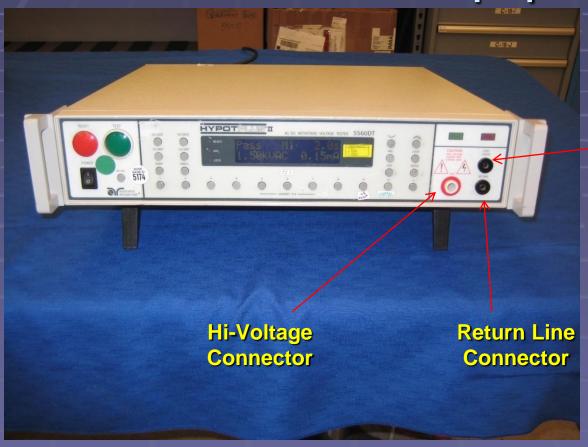

**Continuity Connector** 


**Hi-Pot Tester** 





Break out Box with AC Cord attached



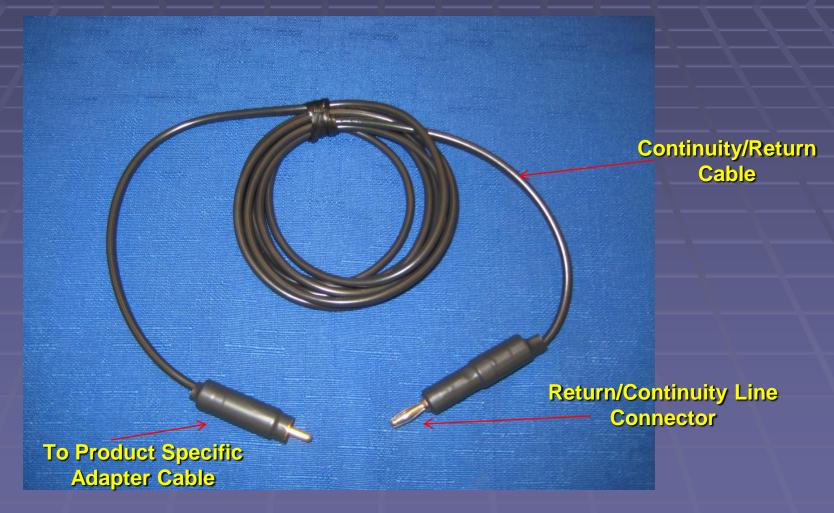

**Continuity/Return Cable (2 needed)** 

# Better sound through research® Hi-Pot Common Equipment



Continuity/Return Cable (2 needed)

- •When using this cable for the continuity connection it will connect directly to the Hi-Pot continuity connector and directly to the UUT via the adapter cable
- •When using this cable for the return connection it will connect to the return feed-thru connector on the Break-Out Box then to the UUT via the adapter cable


# Better sound through research® Hi-Pot Product Specific Equipment



**Continuity/Return Adapter Plug (Only 1 needed)** 




# Better sound through research® Hi-Pot Product Specific Equipment

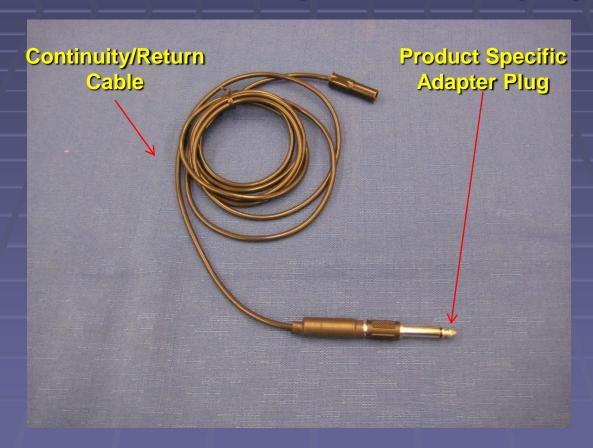

**Continuity/Return Cable (2 needed)** 



#### Hi-Pot Complete Setup Ready For Testing

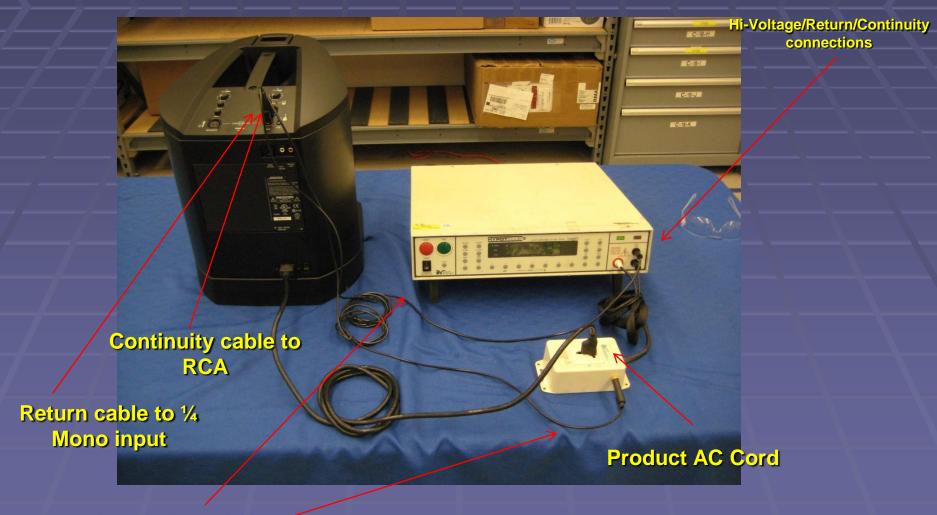

Continuity/Return Cables with Adapters




# Hi-Pot Starting Test

#### 1. Start Test

- Once All Connections Have Been Made You Can Initiate The Test
- To Initiate Test Press the Green Start Button On the Front of the Hi-Pot Tester
- The Tests Will Take Approximately 5 seconds to complete



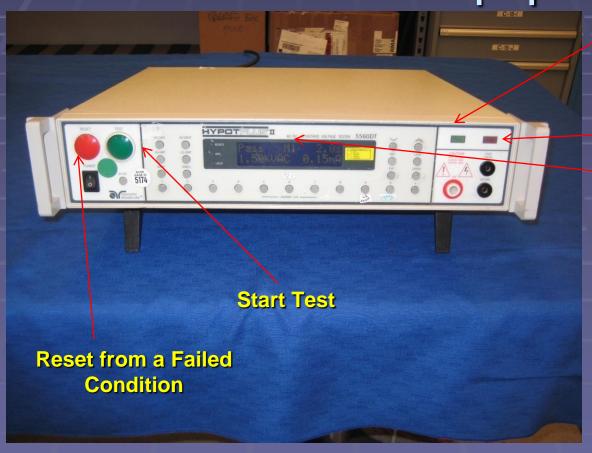

**Pass Indicator** 

**Fail Indicator** 

**Display** 

**Hi-Pot Tester** 



#### Hi-Pot Test Results Pass or Fail

#### Passed Test

 If the test passes you will observe a PASS displayed on the front panel and the GREEN pass indicator light will illuminate on the Front Right of the Hi-Pot tester

#### Failed Test

- If the test fails you will observe a Fail displayed on the front panel and the RED fail indicator light will illuminate on the Front Right of the Hi-Pot tester
- The Hi-Pot tester will also emit a High Pitched alert tone
  - This alert tone will run continuous until reset by pressing the RED reset button on the front left of the Hi-Pot tester



#### Handling of Passed Units

Passed Test

 If the Hi-Pot test passes the unit may continue to the next step in your process



#### Handling of Failed Units

#### Failed Test !!!!

- ALL UNITS THAT FAIL HI-POT TESTING MUST BE SENT TO A QUALIFIED REPAIR TECHNICIAN FOR ANALYSIS AND/OR REPAIR.
- ALL UNITS THAT HAVE BEEN SENT TO ANALYSIS / REPAIR MUST BE RE-TESTED
- IF A UNIT FAILS HIPOT TESTING IT IS CONSIDERED A POTENTIAL SAFETY HAZARD AND MUST BE HANDLED ACCORDINGLY. IN NO CIRCUMSTANCES MUST THIS UNIT BE ALLOWED TO PROCEED IN THE PROCESS.



# END