

# L1 Pro32 Gasket Placement Procedure

## L1 Pro32 EVA/Foam Gasket Placement Procedures for Main-IO PCB.

**Note:** This procedure is for replacement Main-IO PCBs with missing gaskets.

### Top PCBA

1. The Part Numbers for EVA1, EVA2, EVA3 & EVA4 are:

EVA1 - 844113-0110 (2 pcs)

EVA2 - 844119-0110 (1 pc)

EVA3 - 857479-0110 (1 pc)

EVA4 - 862517-0010 (3 pcs)

See Figure 1.


2. Place the EVA1, EVA2, EVA3 & EVA4 on the Main-IO board based on the wire frames. See Figure 2.

**Bottom PCBA - No gaskets.**



EVA1 EVA2 EVA3 EVA4

**Figure 1. The photos for EVA1, EVA2, EVA3 & EVA4**

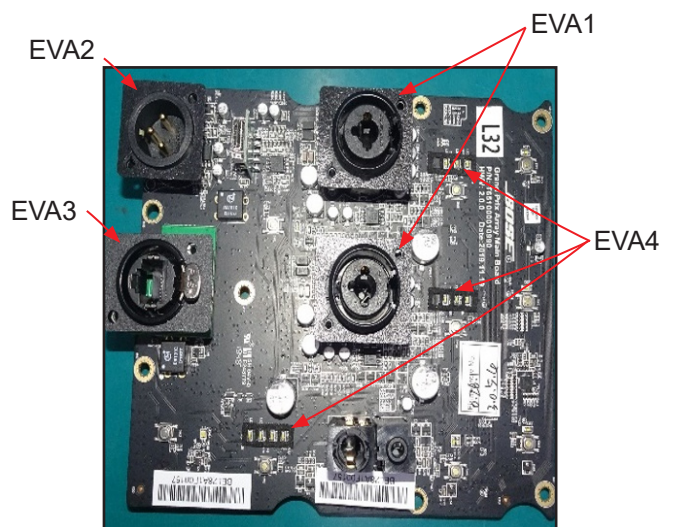

**Figure 2. The Locations for EVA1, EVA2, EVA3 & EVA4**